



Clamp Base

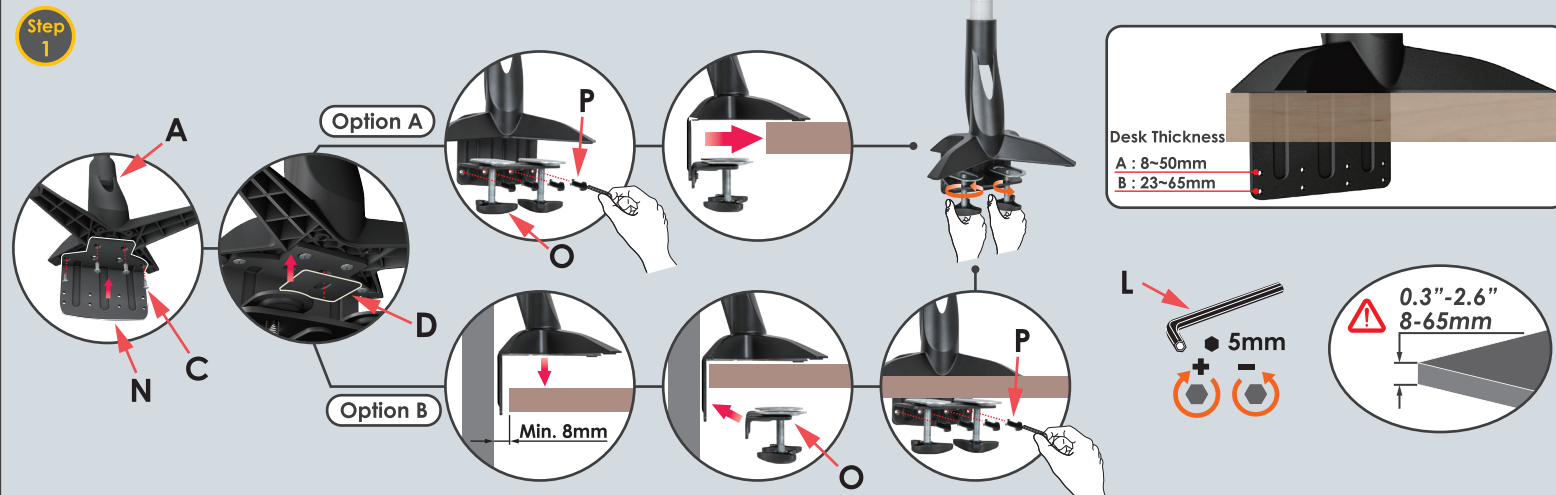


Grommet Base

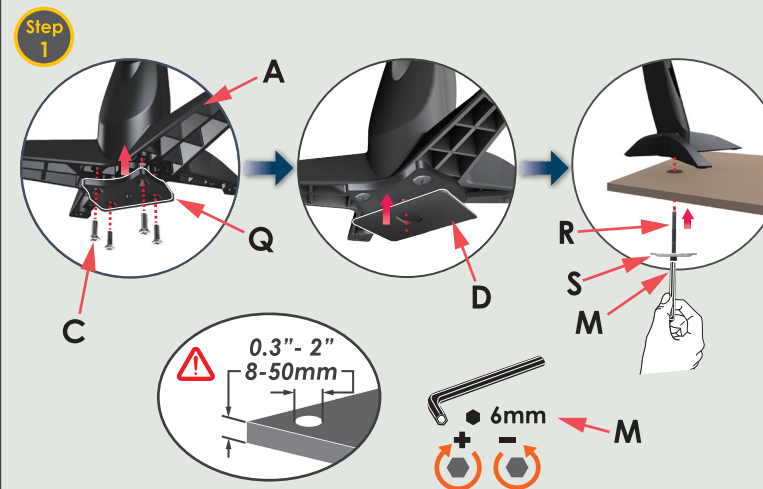


Torque Adjust

- Lift - up & down(for ARM itself) Torque Adjust**
1. Tension of spring can be adjusted per user's preference.
 2. **DO NOT OVERTIGHTEN** the Fastener. Over tightening the fastener may result your LCD ARM in damage.

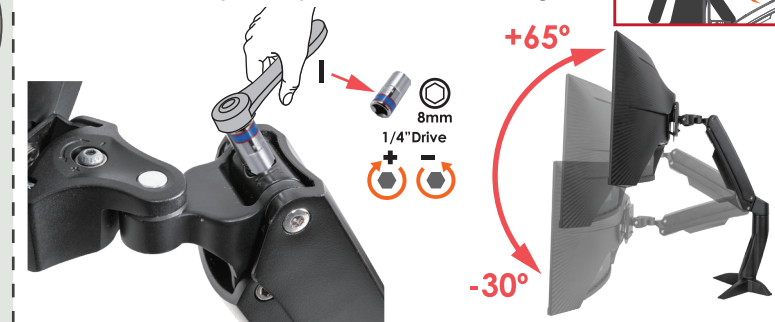


Tilt - Backward & Forward Torque Adjust

1. Tension of Tilt can be adjusted so to match the right monitor or display unit weight.
2. **DO NOT OVERTIGHTEN** the Fastener. Over tightening the fastener may result damage on your equipment.

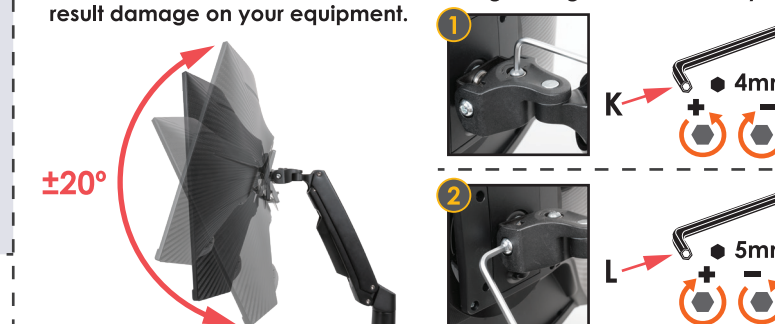


Swivel

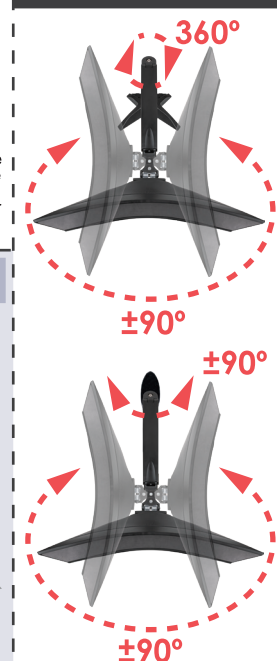

Cable Management



Rotate

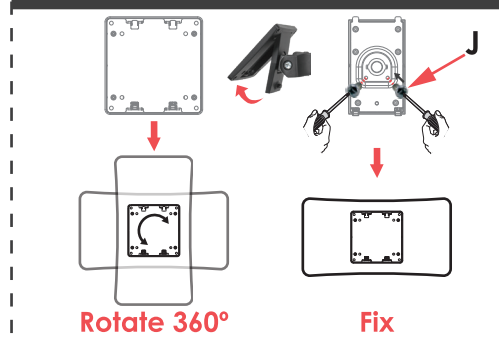

Wall Mount Base

